



<i>Index</i>	<i>Pièce / Part</i>	<i>Désignation</i>	<i>Description</i>
1	28 108	GOULOTTE AUTOMATIQUE INOX	/ STAINLESS STEEL BULK FEED HEAD
2	117 775	MANIVELLE	/ CRANK
3	29 928	GOULOTTE	/ FEED HEAD
4	29 925	ENS. TAQUET D'ACCROCHAGE	/ LID LATCH ASSEMBLY
5	117 809	SUPPORT PLATINE	/ CIRCUIT BOARD SUPPORT
6	117 813	CARTE BOUTONS	/ SWITCHES BOARD
7	29 533	ENS. SUPPORT PLATINE	/ CONTROL BOARD SUPPORT ASSEMBLY
8	117 703	CLAVETTE FIXATION PLASTIQUE	/ PLASTIC KEY
9	118 586	SUPPORT PLATINE	/ CONTROL BOARD SUPPORT
10	407 092	PLAQUE FRONTALE	/ FRONT PLATE
11	502 170	BOUTON VERT VITESSE 1	/ GREEN KNOB SPEED 1
12	503 268	BOUTON VERT VITESSE 2	/ GREEN KNOB SPEED 2
13	502 169	BOUTON ROUGE	/ RED KNOB
14	29 908	ENS. ROULETTE	/ WHEEL ASSEMBLY
15	118 566	AXE ROULETTE	/ WHEEL SHAFT
16	118 567	RESSORT ROULETTE	/ WHEEL SPRING
17	118 565	ROULETTE	/ WHEEL
18	200 008	CIRCLIPS Ø 52 INT	/ BUSHING
19	118 584	ENTRETOISE H 22,5	/ SPACER H 22,5
20	203 157	CLAVETTE 6x6x30	/ KEY 6x6x30
21	118 585	POULIE RECEPTRICE	/ DRIVEN PULLEY
22	103 889	PLAQUE DE FOND	/ BOTTOM PLATE
23	117 774	PLATEAU D'ALIMENTATION	/ FEEDING TRAY
24	29 058	ENS BAGUE EPAULEES	/ SHOULDERED RING ASSEMBLY
25	117 777	AGITATEUR	/ AGITATOR
26	102 690	DISQUE EVACUATEUR	/ DISCHARGE PLATE
27	29 907	ENS. DOUILLE ETANCHEITE	/ SEALING SOCKET ASSEMBLY
28	29 906	ENS. JOINTS ETANCHEITE	/ SEALS ASSEMBLY
29	29 451	ENS. ILS COUVERCLE	/ LID SAFETY SWITCH ASSEMBLY
30	29 926	ENS. BAGUES DE GUIDAGE	/ PLASTIC BUSHINGS ASSEMBLY
31	29 705	PORTE AIMANT	/ MAGNET HOLDER
32	118 420	EVACUATEUR CHOUX	/ CABBAGE DISCHARGE PADDLE
33	39 087	BUTEE COUVERCLE CAOUTCHOUC	/ RUBBER LID STOP
34	500 561	POIGNEE	/ HANDLE
35	407 295	PLAQUE DISQUES	/ DISCS PLATE
36	28 104	GOULOTTE A LEVIER	/ PUSHER LEVER FEED HEAD
37	103 205	BIELLETTE	/ SMALL ROD
38	29 710	ENS. LEVIER	/ LEVER ASSEMBLY
39	118 335	ENS. SUPPORT LEVIER	/ PUSHER SUPPORT ASSEMBLY
40	118 331	BAGUE DE GUIDAGE	/ PLASTIC BUSHING
41	509 200	POIGNEE PLASTIQUE	/ PLASTIC HANDLE
42	118 397	POUSSOIR PLASTIQUE	/ PLASTIC PUSHER
43	118 333	POUSSOIR ALUMINIUM	/ ALUMINIUM PUSHER
44	29 706	ENS. BUTEE POUSSOIR	/ PUSHER STOP ASSEMBLY
45	117 321	BUTEE ANTI FRICTION	/ ANTI FRICTION STOP
46	29 929	ENS. COUVERCLE	/ LID ASSEMBLY
47	29 156	ENS. CONE CHARGEMENT	/ FEEDING CONE ASSEMBLY
48	117 200	RONDELLE	/ WASHER
49	29 692	ENS. EVIDEUR	/ SCOOPER ASSEMBLY
50	118 436	CLEF EVIDEUR	/ SCOOPER WRENCH
51	503 272	CABLE D'ALIMENTATION	/ POWER CORD
52	118 582	TIGE DE VERROUILLAGE	/ LOCKING ROD
53	39 071	ENSEMBLE ARRET DE CABLE	/ STRAIN RELIEF ASSEMBLY
54	29 924	ENSEMBLE BATI	/ MOTOR HOUSING FRAME ASSEMBLY
55	29 914	ENS. ILS TAQUET D'ACCROCHAGE	/ LID LATCH SAFETY SWITCH ASSEMBLY

<i>Index</i>	<i>Pièce / Part</i>	<i>Désignation</i>	<i>Description</i>	
56	118 527	PIED CAOUTCHOUC	/	RUBBER FOOT
57	203 164	CLAVETTE 6x6x25	/	KEY 6x6x25
58	100 869	POULIE MOTRICE	/	DRIVING PULLEY
59	118 529	SUPPORT MECANIQUE	/	MECHANICAL SUPPORT
60	203 104	VIS D'APPUI	/	SUPPORTING SCREW
61	29 915	ENS. AXE	/	SHAFT ASSEMBLY
62	504 328	ROULEMENT	/	BALL BEARING
63	500 845	COURROIE 670 5M 25	/	BELT 670 5M 25
A		PLATINE	/	CONTROL BOARD
M		MOTEUR	/	MOTOR
Machine		Voltage	A	M
2781 / 2786 / 2791		400/50/3	103 700	303 105
2782 / 2787 / 2792		380/60/3	103 700	303 107
2783 / 2788 / 2793		220/60/3	103 700	303 106
2784 / 2789 / 2794		230/400/50/3	113 700	303 108